télécommandes, adaptateurs CA, piles, sondes de température, pointes de lecture, stylets, plateaux, filtres, câbles, papier, boîtier et composantes de boîtiers, boutons, paniers, supports, tablettes et accessoires et ustensiles de cuisson.

e. Tout dommage apparent à la surface ou au boîtier extérieur de l'appareil et attribuable à la détérioration ou à l'usure résultant d'un usage normal.
f. Tout dommage causé par des conditions externes ou environnementales, incluant, sans en exclure d'autres, les lignes de transmission ou de transport d'énergie ou le renversement de liquide.
g. Tout appareil ne portant pas les identifications appropriées quant aux numéros de modèle et de série ni les étiquettes et attestations de l'ACNOR, de l'ULC, de l'ULI, de l'ETL au Canada et aux États-Unis.
h. Tout appareil utilisé à des fins commerciales ou de location.
i. Tous les frais d'installation, d'ajustement et/ou de programmation.

Si cet appareil de marque ELECTROHOME devient défectueux au cours de la période de garantie, une réparation peut être obtenue, conformément aux termes de la présente garantie, en présentant cet appareil ELECTROHOME avec la preuve d'achat originale et une copie de la présente GARANTIE LIMITÉE à un centre de service autorisé par ELECTROHOME. Le service à domicile est effectué, à la discrétion de SYNNEX Canada Limitée, sur les téléviseurs de marque ELECTROHOME dotés d'un écran de 27 pouces et plus. La présente garantie constitue l'intégrale de la garantie expresse accordée par SYNNEX Canada Limitée et aucun autre détaillant, centre de service ni leur agent ou employé n'est autorisé à prolonger, étendre ou transférer la présente garantie au nom de SYNNEX Canada Limitée. Dans la mesure où la loi le permet, SYNNEX Canada Limitée décline toute responsabilité pour des dommages ou pertes directs et indirects, tous dommages accessoires, particuliers ou consécutifs ou perte de profits résultant d'un défaut de matériau ou de fabrication de cet appareil, incluant les dommages attribuables à la perte de temps ou perte de jouissance de cet appareil ELECTROHOME ou de la perte de données. Il incombe à l'acheteur de défrayer les coûts encourus pour l'enlèvement, la réinstallation, le transport et l'assurance de cet appareil. La correction de toute défectuosité, de la manière et dans les délais indiqués dans la présente, constitue l'exécution intégrale de tous les engagements et obligations contractés par SYNNEX Canada Limitée envers l'acheteur à l'égard de cet appareil et représentera la pleine et entière satisfaction vis-à-vis de toutes les réclamations contractuelles ou attribuables à la négligence, et la responsabilité absolue ou autre.

**PÉRIODES DE GARANTIE SUR LES PIÈCES ET LA MAIN-D'ŒUVRE POUR LES APPAREILS RAPPORTÉS AUX CENTRES DE SERVICE :**

- Appareils audio : 1 an (télécommande, s'il y a lieu – 90 jours)
- Lecteurs DVD : 1 an (télécommande – 90 jours)
- Téléviseurs à écran ACL ou plasma : 1 an (télécommande – 90 jours)
- Téléviseurs : 1 an (télécommande – 90 jours)
- Magnétoscopes : 1 an (télécommande – 90 jours, têtes vidéo – 6 mois)
- Électroménagers : 1 an
  - Four à micro-ondes, pièces de magnétron seulement, 3 ans additionnels
  - Réfrigérateurs/congélateur, pièces de compresseur seulement, 4 ans additionnels

Pour obtenir le nom et l'adresse du centre de service ELECTROHOME autorisé le plus près de chez vous ou pour plus de renseignements sur cette garantie :

- Visitez www.electrohome.ca
- Postez votre demande à
  SYNNEX Canada Limitée
  Centre de service à la clientèle
  200, Ronson Drive
  Toronto, ON M9W 5Z9; ou
- Composez le numéro sans frais : 1-800-663-5954, du lundi au vendredi, de 9 h à 17 h, heure de l'Est.



MODEL NO. CRC251E

ELECTROHOME

# Under-the-cabinet CD Player with AM/FM Clock Radio

- Slot Loading CD Player
- Blue LED Backlit Display
- 4 Speaker Sound

## User's Manual

www.electrohome.ca

## CONTROLS AND FUNCTIONS

1. **POWER/ALARM SETTING**
2. **NIGHT LIGHT**
3. **CD COMPARTMENT**
4. **DISPLAY BUTTON**
5. **ALARM ON/OFF BUTTON**
6. **CD-BASS BUTTON**
7. **SLEEP BUTTON**
8. **SNOOZE BUTTON**
9. **REPEAT/M-RECALL BUTTON**
10. **RANDOM BUTTON**
11. **TUNER BUTTON**
12. **NEXT/FF TUN+ BUTTON**
13. **CD/PLAY/PAUSE BUTTON**
14. **STOP/BAND BUTTON**
15. **PROG/C-ADJ BUTTON**
16. **PREVIOUS/FB/TUN- BUTTON**
17. **VOL+ BUTTON**
18. **VOL- BUTTON**
19. **FUNCTION SWITCH (AUTO/CD/TUNER/BUZZER)**
20. **SPEAKERS**
21. **⏏ (CD LOAD/ EJECT)**
22. **LIGHT ON/OFF BUTTON**
23. **BRACKET**
24. **LCD DISPLAY**
25. **POWER CORD**
26. **FM ANTENNA WIRE**

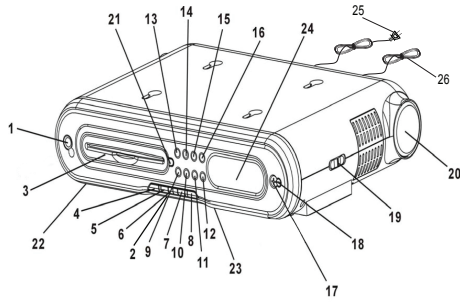


## POWERING THE UNIT

I. PLUG THE POWER CORD INTO THE AC POWER SOCKET ON THE BACK OF THE UNIT. NOW PLUG THE AC ADAPTOR INTO A STANDARD NORTH AMERICAN HOUSEHOLD AC POWER OUTLET.

**NOTE: WHEN UNPLUGGING THE AC ADAPTOR; THE AC ADAPTOR PLUGGED IN THE WALL SHOULD BE REMOVED BEFORE YOU UNPLUG THE POWER CORD FROM THE BACK OF THE UNIT.**

II. PRESS POWER TO TURN ON THE UNIT.

III. RESET BOTH THE CORRECT TIME AND THE REQUIRED ALARM TIME FOR PROPER OPERATION.

**NOTE: WHEN YOU CONNECT THE POWER, THE INITIAL STATE OF THE UNIT WILL DISPLAY "12:00".**

## SETTING THE CLOCK/ ALARM

**SETTING THE CLOCK:**

I. PRESS AND HOLD THE **PROG/C-ADJ** BUTTON (15).

II. AT THE SAME TIME PRESS **NEXT/FF/TUN** + BUTTON (12) OR **PREVIOUS/FB/TUN** - BUTTON (16) SEPARATELY TO SET THE HOUR OR MIN TIME.

**NOTE: PRESSING AND HOLDING THE NEXT/FF/TUN + BUTTON (12) OR PREVIOUS/FB/TUN - BUTTON (16) WILL FORWARD THROUGH THE NUMBERS AT A FASTER SPEED.**

**SETTING THE ALARM:**

I. SLIDE THE FUNCTION SWITCH **(AUTO-CD-TUNER-BUZZER)** (19) TO THE **BUZZER** POSITION.

II. PRESS THE DISPLAY **BUTTON** (4) TO CHOOSE AL1 (ALARM 1) SETTING OR AL2 (ALARM 2) SETTING. THE LCD WILL DISPLAY "AL1" OR "AL2".



**NOTE: PRESSING THE DISPLAY BUTTON (4) ONCE WILL SELECT AL1, AND PRESSING THE DISPLAY BUTTON (4) TWICE WILL SELECT AL2.**

III. SETTING THE TIME FOR AL1 AND AL2 IS THE SAME AS SETTING THE TIME FOR THE CLOCK. **(SEE: SETTING THE CLOCK: II.)**. AFTER YOU HAVE SET THE ALARM TO THE DESIRED TIME, PRESS ALARM/ON/OFF BUTTON (5) TO STORE THE TIME.

IV. PRESSING THE **SNOOZE** BUTTON (8) WHILE THE BUZZER IS SOUND WILL TEMPORARILY MUTE THE BUZZER FOR 9 MINUTES.

**NOTE: IF THE SNOOZE BUTTON IS PRESSED DURING AL1 IT WILL ALSO MUTE AL2 FROM SOUNDING IF THE TIME FOR AL2 IS WITHIN THE 9 MINUTE SNOOZE TIME.**

V. TO TURN OFF AL1 OR AL2 WHILE THE BUZZER IS SOUND, PRESS THE POWER/ ALARM RESET BUTTON (1).

**NOTE: IF AL1 IS TURNED OFF BEFORE AL2 SOUNDS, IT WILL NOT TURN OFF AL2.**

## SWITCHING TO NORMAL MODE

PRESS THE **POWER/ALARM RESET** BUTTON (1) TO TURN ON THE LCD BACK LIGHT AND TO SWITCH THE UNIT TO NORMAL OPERATION MODE.

## USING THE RADIO

IN NORMAL MODE, PRESS THE **TUNER** BUTTON (11) TO SELECT THE RADIO FUNCTION.

I. PRESS THE **VOL** + BUTTON (17)/ **VOL** - BUTTON (18) TO TURN UP/ DOWN THE VOLUME."**L UP**/ **L DN**" WILL BE SHOWN ON THE LCD.

II. TO SELECT AM/FM MODE PRESS THE STOP/BAND BUTTON (14).

**NOTE: IN FM MODE "ST" WILL APPEAR ON THE DISPLAY IF A STEREO STATION HAS BEEN SELECTED.**

III. TO SET THE STATION FREQUENCY, PRESS THE **NEXT/FF/TUN** + BUTTON (12) OR **PREVIOUS/FB/TUN** - BUTTON (16).

**NOTE: TO AUTO SEARCH FOR A STATION PRESS AND HOLD THE NEXT/FF/TUN + BUTTON (12) OR PREVIOUS/FB/TUN - BUTTON (16) FOR 2 SECONDS.**

## SETTING RADIO PRESETS

I. WHILE IN RADIO MODE, PRESS THE **NEXT/FF/TUN** + BUTTON (12) OR **PREVIOUS/ FB/TUN** - BUTTON (16) TO SELECT THE DESIRED AM/FM STATION TO BE PROGRAMMED.

II. PRESS THE **PROG/C-ADJ** BUTTON (15) TO ENTER THE PROGRAM FUNCTION MODE. THE LCD DISPLAY WILL SHOW "MEMORY" AND "P".

III. PRESS THE **REPEAT/M-RECALL** BUTTON (9) TO SELECT THE REQUIRED STATION NUMBER, THEN PRESS THE **PROG/C-ADJ BUTTON** (15) TO CONFIRM THE STATION NUMBER.

**NOTE: THERE ARE 15 PRESETS FOR AM AND 15 PRESETS FOR FM. THIS ALLOWS YOU TO STORE 30 STATIONS BETWEEN BOTH AM/FM BANDS.**

## USING THE CD PLAYER

IN NORMAL MODE, PRESS THE **CD/PLAY/PAUSE** BUTTON (13) TO SWITCH THE UNIT TO CD MODE.

I. PRESS ⏏ (21) TO LOAD THE CD INTO THE SLOT.

II. GENTLY INSERT A CD INTO THE CD SLOT AND PRESS ⏏ (21).

**NOTE:THE CD TRACKS WILL BE DISPLAYED ON THE LCD DISPLAY AFTER 5-12 SECONDS. IF NO DISC HAS BEEN INSERTED, THE DISPLAY WILL SHOW "cd ---". IF A DISC HAS BEEN INSERTED THAT IS DAMAGED OR CAN NOT BE READ THE DISPLAY WILL SHOW "cd E".**

**PLAYING A CD**

I. PRESS **CD/PLAY/PAUSE** BUTTON (13) TO PLAY THE DISC.

**NOTE: THE LCD DISPLAY WILL SHOW THE TRACK NO.**

**PAUSING THE UNIT**

I. TO PAUSE THE CD PRESS THE **CD/PLAY/PAUSE** BUTTON (13) ONCE WHILE THE CD IS PLAYING.
II. TO UN-PAUSE THE CD PRESS THE **CD/PLAY/PAUSE** BUTTON (13) AGAIN. (WHILE THE CD IS PAUSED).

**REPEAT/M-RECALL FUNCTION**

I. PRESS THE **REPEAT/M-RECALL** BUTTON (9) TWICE TO REPEAT ALL TRACKS ON THE CD. THE LCD DISPLAY WILL FLASH "REPEAT".
II. PRESS THE **REPEAT/M-RECALL** BUTTON (9) ON A SINGLE SONG TO REPEAT THAT SONG.
III. TO TURN OFF REPEAT, SIMPLY PRESS THE **REPEAT/M-RECALL** BUTTON (9) AGAIN.

**RANDOM FUNCTION**

TO PLAY TRACKS RANDOMLY ON THE CD:

I. WHILE THE CD HAS STOPPED, PRESS THE **RANDOM** BUTTON (10) TO SWITCH TO RANDOM MODE. THE LCD WILL DISPLAY "RANDOM".
II. IN RANDOM MODE, PRESS **NEXT/FF/TUN** + BUTTON (12) TO INDEX THE RANDOM PLAYING PROGRAM.
III. PRESS THE **STOP** BUTTON (14) TO CANCEL THE RANDOM FUNCTION.

**PROG/C-ADJ FUNCTION**

TO MANUALLY PROGRAM THE SEQUENCE THAT THE CD TRACKS WILL PLAY:

I. WHILE THE CD IS STOPPED, PRESS THE **PROG/C-ADJ** BUTTON (15). THE LCD DISPLAY WILL SHOW "MEMORY" AND "CD 0".
II. NEXT PRESS **NEXT/FF/TUN** + BUTTON (12) OR **PREVIOUS/FB/TUN** - BUTTON (16) TO SELECT THE CD TRACK. PRESS **PROG/C-ADJ** BUTTON (15) TO STORE THE SELECTED CD TRACK. REPEAT THE ABOVE STEPS TO STORE UP TO 20 CD TRACKS.
III. IN THE CD PROGRAM SETTING, PRESS **PROG/C-ADJ** BUTTON (15) TO SWITCH TO INDEX THE TRACK NO.
IV. PRESS THE **STOP/BAND** BUTTON (14) TO CANCEL ALL PROGRAMMED TRACKS.

**NEXT/FF/TUN+ AND PREVIOUS/FB/TUN- FUNCTION**

I. WHILE THE CD HAS STOPPED, PRESS THE **NEXT/FF/TUN** + BUTTON (12) OR **PREVIOUS/FB/TUN** - BUTTON (16) TO SKIP THE TRACK. TO INDEX A TRACK, PRESS AND HOLD EITHER THE **NEXT/FF/TUN** + BUTTON (12) OR THE **PREVIOUS/FB/TUN** - BUTTON (16).
II. WHILE THE CD IS PLAYING, YOU CAN ADVANCE TO THE NEXT TRACK BY PRESSING THE **NEXT/FF/TUN** + BUTTON (12); OR YOU CAN REVERT BACK TO THE PREVIOUS TRACK BY PRESSING THE **PREVIOUS/FB/TUN** - BUTTON (16).
III. WHILE THE CD IS PLAYING, YOU CAN PRESS AND HOLD THE **NEXT/FF/TUN** + BUTTON (12) OR THE **PREVIOUS/FB/TUN** - BUTTON (16) TO READ THE CD TRACK AT A FASTER SPEED.



**CD-BASS**

WHILE PLAYING THE CD, PRESS THE **CD-BASS** BUTTON (6) TO BOOST THE BASS SOUND. THE LCD DISPLAY WILL SHOW "X-BASS". TO CANCEL THE BASS BOOST, PRESS THE **CD-BASS** BUTTON (6) AGAIN.

**WAKE TO RADIO**

TO WAKE UP TO RADIO, FIRST MAKE SURE THAT YOU HAVE SET THE ALARM TIME WHICH YOU WOULD LIKE TO WAKE UP AT. **(SEE ALARM SETTING)**.

I. WHILE THE RADIO IS ON, TUNE TO THE DESIRED RADIO STATION AND VOLUME LEVEL.
II. PRESS THE **POWER/ALARM RESET** BUTTON (1) TO SWITCH TO NORMAL MODE.
III. NOW SLIDE THE FUNCTION SWITCH **AUTO-CD-TUNER-BUZZER** (19) TO THE TUNER POSITION.
IV. WHEN THE TIME REACHES YOUR PROGRAMMED ALARM TIME, THE RADIO WILL AUTOMATICALLY TURN ON TO YOUR TUNED STATION AND VOLUME LEVEL.

**WAKE TO CD**

TO WAKE UP TO CD, FIRST MAKE SURE THAT YOU HAVE SET THE ALARM TIME WHICH YOU WOULD LIKE TO WAKE UP AT. **(SEE ALARM SETTING)**.

I. WHILE IN NORMAL MODE, SLIDE THE FUNCTION SWITCH **AUTO-CD-TUNER-BUZZER** (19) TO THE CD SETTING.
II. WHEN THE TIME REACHES YOUR PROGRAMMED ALARM TIME, THE CD WILL AUTOMATICALLY TURN ON AND PLAY FROM THE FIRST TRACK.

**SLEEP FUNCTION**

I. TURN ON THE RADIO OR CD AND PRESS THE **SLEEP** BUTTON (7). THIS WILL ACTIVATE THE SLEEP TIMER.
II. CONTINUOUSLY PRESS THE **SLEEP** BUTTON (7) UNTIL YOU HAVE REACHED THE TIME DELAY IN WHICH YOU WOULD LIKE THE RADIO OR CD TO TURN OFF.

**NOTE: YOU CAN PROGRAM THE DELAY ANYWHERE FROM 10 MINUTES UP TO 90 MINUTES, BUT CAN ONLY PROGRAM THEM IN 10 MINUTE INTERVALS.**

III. ONCE THE DESIRED SLEEP TIME HAS BEEN REACHED, THE RADIO OR CD WILL AUTOMATICALLY TURN OFF. IF YOU WOULD LIKE TO SWITCH OFF THE CD OR RADIO BEFORE THE SLEEP TIME HAS BEEN REACHED, SIMPLY PRESS THE **SLEEP** BUTTON (7).

**LIGHT ON/OFF**

TO TURN ON OR OFF THE LIGHT ON THE BOTTOM OF THE UNIT, SIMPLY PRESS THE **LIGHT ON/OFF** BUTTON (22). PRESSING THE BUTTON ONCE WILL TURN THE LIGHT ON, PRESSING IT AGAIN WILL TURN THE LIGHT OFF.

**DRIPPING & VENTILATION WARNING**

I. DO NOT EXPOSE THIS PRODUCT TO ANY DRIPPING OR SPLASHING LIQUIDS. DOING SO MAY CAUSE DAMAGE TO THE UNIT.
II. DO NOT COVER OR PLACE ANY OBJECT OVER THE VENTILATION HOLES OF THE PRODUCT. DOING SO MAY CAUSE THE UNIT TO OVER HEAT, CAUSING DAMAGE.

**DISPOSAL OF UNIT**

THIS PRODUCT HAS BEEN MANUFACTURED WITH HIGH QUALITY MATERIALS AND COMPONENTS WHICH CAN BE RECYCLED AND REUSED.

THIS MEANS THAT THE ELECTRICAL AND ELECTRONIC EQUIPMENT OF THIS UNIT (AT THEIR END OF LIFE), SHOULD BE DISPOSED OF SEPARATELY FROM YOUR HOUSEHOLD WASTE.

PLEASE DISPOSE OF THIS EQUIPMENT AT YOUR LOCAL COMMUNITY WASTE COLLECTION/ RECYCLING FACILITY.

PLEASE HELP US TO CONSERVE THE ENVIRONMENT WE LIVE IN!

**ELECTROHOME® WARRANTY**
Consumer Electronics Products and Home Appliances

**Thank you for choosing ELECTROHOME®!**

SYNNEX Canada Limited gives the following express warranty to the original consumer purchaser or gift recipient for this ELECTROHOME product, when shipped in its original container and sold or distributed in Canada by SYNNEX Canada Limited or by an Authorized ELECTROHOME Dealer:

SYNNEX Canada Limited warrants that this product is free, under normal use and maintenance, from any defects in material and workmanship. If any such defects should be found in this product within the applicable warranty period, SYNNEX Canada Limited shall, at its option, repair or replace the product as specified herein. Replacement parts furnished in connection with this warranty shall be warranted for a period equal to the unexpired portion of the original equipment warranty.

This warranty shall not apply to:

a. Any defects caused or repairs required as a result of abusive operation, negligence, accident, improper installation or inappropriate use as outlined in the owner's manual.
b. Any ELECTROHOME product tampered with, modified, adjusted or repaired by any party other than SYNNEX Canada Limited or ELECTROHOME's Authorized Service Centres.
c. Damage caused or repairs required as a result of the use with items not specified or approved by SYNNEX Canada Limited, including but not limited to head cleaning tapes and chemical cleaning agents.
d. Any replacement of accessories, glassware, consumable or peripheral items required through normal use of the product including but not limited to earphones, remote controls, AC adapters, batteries, temperature probe, stylus, trays, filters, cables, paper, cabinet, cabinet parts, knobs, buttons, baskets, stands, shelves, cookware and cooking utensils.
e. Any cosmetic damage to the surface or exterior that has been defaced or caused by normal wear and tear.



f. Any damage caused by external or environmental conditions, including but not limited to transmission line/power line voltage or liquid spillage.
g. Any product received without appropriate model, serial number and CSA /cUL /cULus / cETL /cETLus markings.
h. Any products used for rental or commercial purposes.
i. Any installation, setup and/or programming charges.

Should this ELECTROHOME product fail to operate during the warranty period, warranty service may be obtained upon delivery of the ELECTROHOME product together with proof of purchase and a copy of this LIMITED WARRANTY statement to an Authorized ELECTROHOME Service Centre. In-home warranty service may be provided at SYNNEX Canada Limited's discretion on any ELECTROHOME television with the screen size of 27" or larger. This warranty constitutes the entire express warranty granted by SYNNEX Canada Limited and no other dealer, service centre or their agent or employee is authorized to extend, enlarge or transfer this warranty on behalf of SYNNEX Canada Limited. To the extent the law permits, SYNNEX Canada Limited disclaims any and all liability for direct or indirect damages or losses or for any incidental, special or consequential damages or loss of profits resulting from a defect in material or workmanship relating to the product, including damages for the loss of time or use of this ELECTROHOME product or the loss of information. The purchaser will be responsible for any removal, reinstallation, transportation and insurance costs incurred. Correction of defects, in the manner and period of time described herein, constitute complete fulfillment of all obligations and responsibilities of ELECTROHOME Electronics to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise.

**CARRY-IN PARTS & LABOUR WARRANTY PERIODS:**

- Audio Products: 1 Year (Remote Control, if applicable – 90 Days)
- DVD Products: 1 Year (Remote Control – 90 Days)
- LCD & Plasma Display TV: 1 Year (Remote Control – 90 Days)
- Television Products: 1 Year (Remote Control – 90 Days)
- VCR Products: 1 Year (Remote Control – 90 Days, Video Heads – 6 Months)
- Home Appliances: 1 Year
    - Microwave Magnetron parts only additional 3 Years
    - Refrigerator / Freezer Compressor parts only, additional 4 years

To obtain the name and address of the nearest Authorized ELECTROHOME Service Centre or for more information on this warranty

- visit www.electrohome.ca
- mail your inquiry to
  SYNNEX Canada Limited
  ELECTROHOME Customer Service
  200 Ronson Drive, Toronto, ON M9W 5Z9; or
- call toll free 1-800-663-5954, Monday to Friday 9:00am – 5:00pm Eastern Time.